

CODE SCAN

Code scan is another way of finding the correct code for your component. In this method, the remote will scan through all of the codes which are contained in the remote control's memory until it finds your code.

1. Manually, turn on the component that you want to set up (TV, VCR, Cable or CD).
2. Hold the device key ("TV", "VCR", "Cable", "CD") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key.
4. Press "0-0-0" within 30 seconds. The green light will remain on during the Code Scan process.
5. Press the "Power" key repeatedly until your component turns off. The green light will flicker each time the "Power" key is pressed.
6. As soon as your component turns off, press the "Enter" key. This will save the code.

AUTO CODE SCAN

The auto code scan feature allows you to set up your components without having to enter in code numbers. The Jensen will do the work for you!

1. Manually, turn on the component that you want to set up (TV, VCR, Cable or CD).
2. Hold the device key ("TV", "VCR", "Cable", "CD") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key.
4. Press the "Surf" key within 30 seconds. The green light will remain on during the auto code scan process.
5. As soon as your device turns off, press the "Enter" key. This will save the code. You have one second in which to press the "Enter" key. Otherwise, the code will not be saved and you will need to return to Step 1 and start over.

CODE READBACK

If you did not write down the code numbers when you programmed your remote control and you haven't removed the batteries, your Jensen can tell you what your codes are. Just follow these instructions.

1. Hold the device key, of the component for which you would like to know the programmed code ("TV", "VCR", "Cable", "CD"), down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Release the device key.
3. Press the "Enter" key.
4. Count the number of times the green light blinks. There will be three numbers, separated by a two-second pause.
Example: 4 blinks-pause-1blink-pause-10 blinks=410
Note: 10 blinks=0

Make sure you write the code numbers below for future use!

TV	___	-	___	-	___
VCR	___	-	___	-	___
CABLE	___	-	___	-	___
CD	___	-	___	-	___

SC-331 SMART LITE INSTRUCTIONS

To turn on the light on your Smart Lite SC-331 remote control:

1. Press any key on the remote control. The remote control will light up and stay on for 2 seconds.

The light will automatically turn off after 2 seconds without a key press. This helps to conserve the batteries.

SURF (TV CHANNEL SCAN)

The Surf feature allows you to scan through the TV channels without having to keep pressing the "Channel +/-" key. The Surf feature is currently programmed at a speed of 6. However, you can program the speed at which you Surf through the channels to be faster or slower than the current setting.

To program the speed of the Surf feature:

1. Hold the "Surf" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Press a number key, 1 (fastest) through 9 (slowest), relating to the speed in which the Surf feature will scan through the channels.

To start Surfing:
Press the "Surf" key.

To stop Surfing:
Press any key on the remote control.

MULTI FUNCTION SEQUENCE

The Multi feature allows you to perform multiple functions (a series of up to 10 remote control key presses) with the press of one key. For example, you can program your remote to turn on the TV, turn to Channel 9, turn on the VCR, and record with one key press.

A. To program a Multi function sequence (see example before following these steps):

1. Hold the "Multi" key down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
2. Press the component mode key ("TV", "VCR", "Cable", "CD") of the device that you want to control. (The Jensen must be programmed for each device that you are using in the Multi function sequence.)
3. Press the function keys which correspond to the component mode you are in.
4. Only if your multi function sequence has less than 10 key presses, press the "Multi" key.

The following is an example of how to program a Multi function sequence (with 6 key presses) that will turn on the TV, turn to channel 9, turn on the VCR, and record:

1. Hold the "Multi" key down until the green indicator lights comes on.
2. Press the "TV" key. Key press #1
3. Press the "Power" key. Key press #2
4. Press the "9" key. Key press #3
5. Press the "VCR" key. Key press #4
6. Press the "Power" key. Key press #5
7. Press the "⊙" key. Key press #6
8. Press the "Multi" key because this multi function sequence contains less than 10 key presses.

B. To perform the programmed Multi function sequence:


Press the "Multi" key.

Note: If you want to change your Multi function sequence, follow the steps to program a Multi function sequence. Your old Multi will be replaced by the new one.

KEY DESCRIPTIONS

1. Green LED indicator: This light will turn on or blink depending on the function that you are performing. The instructions in this manual will explain the normal operation.
2. Power key: Press this key to turn the selected device on or off.
3. TV mode key: Press this key to control your TV features.
4. CD mode key (SC-340 only): Press this key to control your CD player features.
5. 0-9 keys: Press these keys for numerals or CD tracks.
6. TV/VCR key: Press this key to switch between the TV and VCR mode.
7. Volume (+) key: Press this key to increase the volume.
8. Volume (-) key: Press this key to decrease the volume.
9. Mute key: Press this key to mute the sound.
10. Multi sequence key: Press this key program or perform a multi sequence functions.
11. Fast forward key: Press this key to fast forward a videotape or CD.
12. Stop key: Press this key to stop the playback, recording, rewinding or fast forwarding of videotapes. In CD mode, press this key to stop the playback of a CD.
13. Pause key: Press this key to pause recording or playback of a videotape. Press again to resume recording or playback. In CD mode, press this key to pause the playback of a CD.
14. Record key: Press this key to start recording a program.
15. Rewind key: Press this key to rewind videotape or CD.
16. Play key: Press this key start or resume the playback of a videotape or CD.
17. Surf key: Press this key program the "surf" speed to scan through the channels. Also, this key is used in the Auto Code Scan option.
18. Channel (-) key: Press this key to go down a channel or CD track.
19. Channel(+) key: Press this key to go up a channel or CD track.
20. Recall key: Press this key to switch to the last channel that you were viewing. In CD mode, press this key to repeat a CD track or random play.
21. Enter key: Press this key enter in a channel. In CD mode, press this key enter in a track number 10 or to skip or shuffle disc.
22. Cable mode key: Press this key to control your cable features.
23. VCR mode key: Press this key to control your VCR features.

KEY FUNCTION DIAGRAM

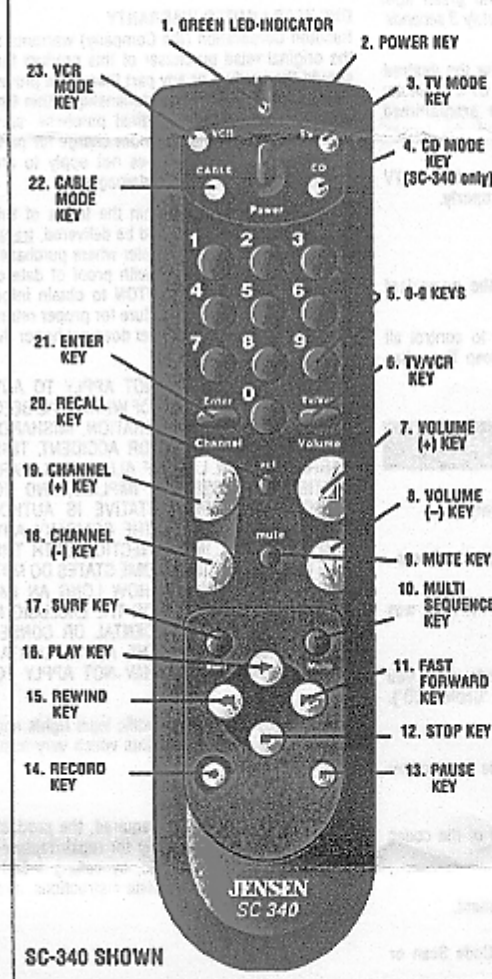

SC-340 SHOWN