

TROUBLE SHOOTING

Problem

No power in remote control (no light).

Solution

Check battery installation and battery freshness.

Problem

The green light did not flash after the code was entered.

Solution

Enter the code within 30 seconds after you release the device key ("TV", "VCR", "Cable/Satellite", "CD/DVD", "RCVR"). Try the code again.

Problem

Code enters into remote, but the component doesn't respond.

Solution

Try the next code on the list. One of the codes should work your component.

Problem

None of the codes work the component.

Solution

After trying all of the codes, try Auto Code Scan.

WARRANTY

30 DAY SATISFACTION GUARANTEE

Recoton Corporation (the Company) warrants to the original retail purchaser of this product, that should you be dissatisfied with this Wireless product for any reason during the first thirty days, we will refund your money. Call 1-800-RECOTON to obtain information regarding the procedure for receiving a refund.

ONE YEAR LIMITED WARRANTY

Recoton Corporation (the Company) warrants to the original retail purchaser of this product that should the product or any part thereof be proven defective in material or workmanship within One Year from the date of original purchase, such defects will be replaced without charge for parts or labor. This warranty does not apply to any incidental or consequential damages.

To obtain replacement within the terms of this warranty, the product should be delivered, transportation prepaid, to the Dealer where purchased or to the Company, along with proof of date of purchase. Call 1-800-RECOTON to obtain information regarding the procedure for proper return of your product, if your Dealer does not honor the warranty.

THIS WARRANTY DOES NOT APPLY TO ANY PRODUCT OR PART THEREOF WHICH HAS BEEN DAMAGED THROUGH ALTERATION, MISHANDLING, MISUSE, NEGLIGENCE OR ACCIDENT. THIS WARRANTY IS IN LIEU OF ALL OTHER WARRANTIES, EXPRESSED OR IMPLIED, AND NO PERSONS OR REPRESENTATIVE IS AUTHORIZED TO ASSUME FOR THE COMPANY ANY OTHER LIABILITY IN CONNECTION WITH THE SALE OF THIS PRODUCT. SOME STATES DO NOT ALLOW LIMITATIONS ON HOW LONG AN IMPLIED WARRANTY LASTS OR THE EXCLUSION OR LIMITATIONS OF INCIDENTAL OR CONSEQUENTIAL DAMAGE SO THE ABOVE LIMITATIONS OR EXCLUSIONS MAY NOT APPLY TO YOU.

This warranty gives you specific legal rights and you may also have other rights which vary from state to state.

NON-WARRANTY SERVICE

If non-warranty service is required, the product may be sent to the Company for repair/replacement, transportation prepaid, by calling 1-800-RECOTON for details, complete instructions, and service fee charges.


The green indicator light comes on. The green light should come on after approximately 3 seconds.

2. Release the device key.
3. Press the "Enter" key.
4. Count the number of times the green light blinks. There will be three numbers, separated by a two-second pause.

Example: 4 blinks-pause-1blink-pause-10 blinks = 410
Note: 10 blinks = 0

Make sure you write the code numbers below for future use!

TV	_____ - _____ - _____
VCR	_____ - _____ - _____
CABLE	_____ - _____ - _____
SATELLITE	_____ - _____ - _____
CD	_____ - _____ - _____
DVD	_____ - _____ - _____
RECEIVER	_____ - _____ - _____

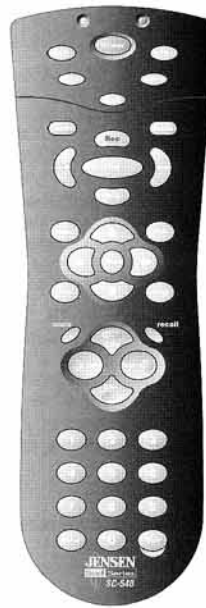

JENSEN®

USER GUIDE SC540

Customer InfoLine:
TOLL FREE 1-800-962-3986

www.jensenremotes.com
KEEP FOR FUTURE USE

Part No. 2426-540

JENSEN®

A Division of Recoton Corp.
2950 Lake Emma Road
Lake Mary, FL 32746
© 1999 Recoton Corp. All rights reserved.
All specifications subject to change without notice.

INTRODUCTION

Important note for new owners.

Thank you for purchasing a Jensen remote control. **Right now, your remote will not work any device.** You will need to install the batteries and then program the remote control.

INSTALLING THE BATTERIES

1. On the back of the Jensen remote control, push the lever up and pull off the battery cover.
2. Install 4 "AAA" batteries, making sure the + and - marks match the diagram inside.
3. Replace the battery cover.
4. Test batteries by holding down a device key ("TV", "VCR", "CABLE/SATELLITE", "CD/DVD", "RCVR") until the green indicator light comes on above the "Power" key. The green indicator should come on after approximately 3 seconds.

NOTE: If you remove the batteries for any reason, you have 25 minutes in which to replace them. If you wait longer than 25 minutes, the codes which you have programmed in the remote control may need to be reprogrammed.

PROGRAMMING THE REMOTE CONTROL

You have 2 options.

1. **Auto Code Scan:** The remote will program itself. No codes need to be entered. Follow the instructions for Auto Code Scan. This is the easier option.
2. **Manual Set-up:** Locate the 3-digit code numbers for your device and brand in the Code Listing. There probably is more than one code listed because manufacturers make more than one model of remote control. However, one of the codes should work your component. **It is important to know that the first code listed isn't necessarily the one that works your component.** You may need to try more than one code. Enter the codes into the remote until the correct one is installed, following the instructions for TV, VCR, Cable/Satellite or Receiver Set-up or CD/DVD Set-up.

AUTO CODE SCAN

The auto code scan feature allows you to set up your components without having to enter in code numbers. The Jensen will do the work for you!

1. Manually, turn on the component that you want to set up (TV, VCR, Cable/Satellite, CD/DVD or Receiver).
2. Hold the device key ("TV", "VCR", "Cable/Satellite", "CD/DVD", "RCVR") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key.
4. Press the "Surf" key within 30 seconds. The green light will blink during the auto code scan process.
5. As soon as your device turns off, press the "Enter" key. This will save the code. You have one second in which to press the "Enter" key. Otherwise, the code will not be saved and you will need to return to Step 1 and start over.

MANUAL SETUP (TV, VCR, CABLE/SATELLITE OR RECEIVER)

1. Manually, turn on the device that you want to set up (TV, VCR, Cable/Satellite or Receiver). In the code listing, find the 3-digit code numbers for your device brand.
2. Hold the device key ("TV", "VCR", "Cable/Satellite", "RCVR") down until the green indicator light comes on. The green light should come on after approximately 3 seconds.
3. Release the device key. Within 30 seconds, enter in the 3-digit code number. The green light will flutter when a successful code is entered.
4. Test the code by pressing the "Power" key. If the device turns off, you have chosen the correct code.* If it does not, return to Step 2 and use the next 3-digit code on the list.

*If the code does not work all component functions, try the next code on the list.

NOTE: If none of the codes turn off your device, try Auto Code Scan.

HELPFUL HINTS

1. Always point the remote at the device that you are controlling.
 - Enter only one 3-digit code at a time.
 - The first code listed isn't always the one for your component.
 - If none of the codes on the list work, try Auto Code Scan.
2. Enter the code within 30 seconds after releasing the device key ("TV", "VCR", "Cable/Satellite", "CD/DVD", "RCVR").
3. If you remove the batteries for any reason, you have 25 minutes in which to replace them without having to re-enter your device codes.

the Surf feature will scan through the channels.

To start Surfing:
Press the "Surf" key.

To stop Surfing:
Press any key on the remote control.

TV, SATELLITE OR DVD MENU CONTROL

In order to Enter Menu Control:

1. Press the key of the component that you want to control ("TV", "SAT", "DVD").
2. Press "Menu" key.

In order to Exit Menu Control:

1. Press "Exit" key or "Menu" key depending on your component.